

Window Perf Application



Note


Clean the flat surface and assure it is dry. Do not apply after the use of Windex or any amonia based chemical window cleaners.

1: Position Window Perf


A: Align window perf inside window frame

B: Place masking tape at the top and assure all areas are level and apply masking tape to sides (approx. 1ft from top) and remove top pieces of the masking tape.

A

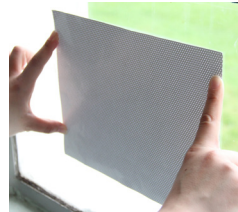

B

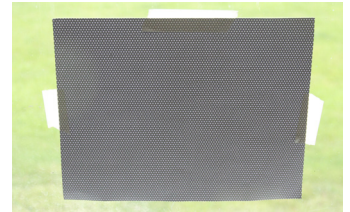

2: Apply Window Perf


A: Begin to peel backing off starting at the top and cut off approximately 1' of backing using scissors

B: Using the felt tip squeegee, slowly begin to apply graphic to the window working from the middle out


C: Gradually work your way down, applying film from the middle out with the felt wrapped squeegee while peeling the backing in 1' increments.

D: Optional: Seal the boarder with clear sealant to product graphics from weather elements.

A

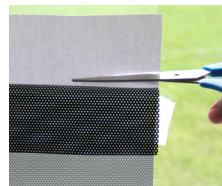

B

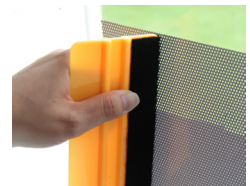

C



D



Post Up Stand

5461 Dunham Road
Maple Heights, Ohio 44137 USA
Phone: 800-935-3534
www.postupstand.com